



RDJ Trucks PRO-OFFROAD Bolt-On Style Fender Flares RDJ Trucks PRO-X-TEND Streamline Style Fender Flares

Installation Instructions - Chevy Colorado / GMC Canyon 2004-2012

Part# **10-1009** (PRO-OFFROAD Series) / **25-1009** (PRO-X-TEND Series)

ATTENTIONATTENTION***ATTENTION*** YOU MUST READ THE FOLLOWING POINTS BEFORE PROCEEDING WITH ANY STEP OF INSTALLATION

1. Inspect your fender flares for shipping damage immediately upon receipt. Shipping damage must be reported within 48 hours of receipt.
2. Test fit all flare pieces to your vehicle before beginning any other step to confirm you have received the correct set of fender flares for your application. Ensure that all pieces in the parts list below are present.
3. While professional installation is always recommended, RDJ Trucks fender flares can be installed by handy individuals with the proper tools. However, it is a 2-man job. Attempting to achieve a proper fit on one's own is highly discouraged.
3. Due to the tolerances allowed by the motor companies during the assembly of the vehicles, some adjustments or modifications may be necessary to achieve a proper fit.
4. PAINTING - All inspections and test fittings must be made prior to painting the fender flares. No claim of damage, fitment or other defects/errors may be made after painting has occurred. RDJ Trucks is not liable for any costs incurred from painting and/or associated labor.
5. Most importantly, we know that when it comes to choosing fender flares for your truck, you have a multitude of options. We are extremely grateful that you put your faith in our small company. If you experience any issues or if there is anything we can do to assist you, please don't hesitate to contact us - info@rdjtrucks.com

PARTS LIST



802/3-0106LF
LEFT FRONT



802/3-0106RF
RIGHT FRONT



802/3-0106LR
LEFT REAR



802/3-0106RR
RIGHT REAR



R0300
(324")



T1193
SEAL TOOL



PLASTIC
RETAINER
24PCS



SELF
TAPPING
SCREW
8PCS



ALLEN BOLT
34 PCS



NYLON NUT
34 PCS




WASHER
34 PCS



TORX BIT
1 PC


*POCKET HARDWARE FOR PRO-OFFROAD SERIES ONLY

1. RUBBER WEATHER SEAL APPLICATION

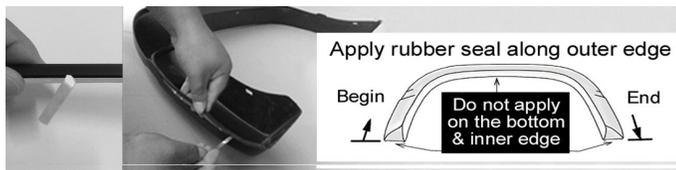


1. Thoroughly clean inside top edge of each flare (where the 3M adhesive will touch) with an alcohol based cleaner.
2. Do not peel the red backing off of the 3M adhesive until instructed. Beginning with the first flare, apply the rubber weather seal in roughly 1 foot sections at a time. From the starting end, leave an extra 1 inch of trim off of the end of the flare so that you can grab and peel the red adhesive backing.
3. With roughly 1 foot of trim applied to the edge, peel the red adhesive backing, pulling it out a few inches at a time. At the same time, press trim firmly in place, ensuring that it is securely adhered to the edge of the flare.
4. Continue the same process in 1 foot sections until the trim is firmly adhered to the entire outer edge of the flare. With a razor knife, cut off the excess trim from each end of the flare.
5. Repeat process for remaining flares.

3. FRONT FLARE - INSTALLATION

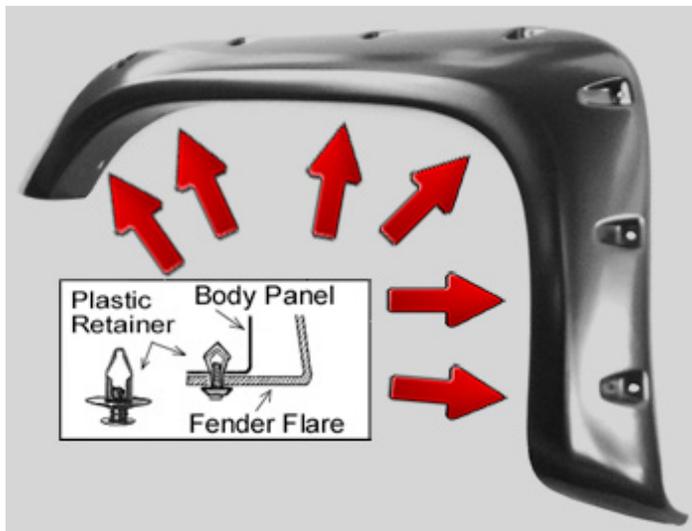

1. With a helper, firmly place the driver side front flare on the fender in the proper position.
2. Apply 6 Plastic Retainers through the mounting holes in the flare, securing them through the existing holes in the truck's fender lip.
3. Repeat on the passenger side.


2. POCKET BOLT APPLICATION

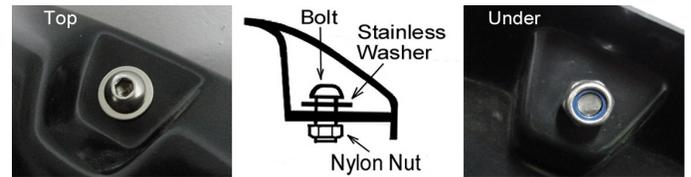

*SKIP THIS STEP FOR X-TEND SERIES FLARES

1. Apply washer to allen bolt and insert allen bolt into each pocket hole. *NOTE: Washer should be on the outside of the flare underneath the allen bolt head, NOT on the backside under the nylon nut.
2. Apply nylon nut to allen bolt and tighten carefully. Do not overtighten.
3. Repeat for each pocket.

4. REAR FLARE - INSTALLATION

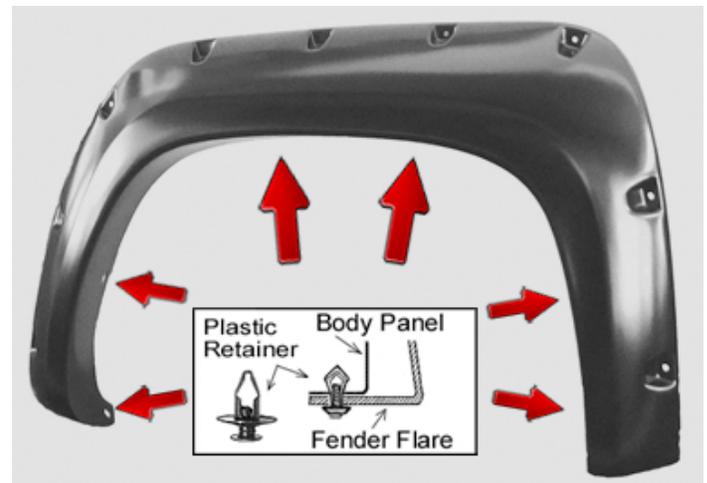

1. With a helper, firmly place the driver side rear flare on the fender in the proper position.
2. Apply 6 Plastic Retainers through the mounting holes in the flare, securing them through the existing holes in the truck's fender lip.
3. Repeat on the passenger side.

FOLLOW US & WIN!!

BE SURE TO FOLLOW US & TAG US IN YOUR PICTURES FOR A CHANCE TO WIN A 100% REBATE OF YOUR PURCHASE!

A NEW WINNER DRAWN EVERY MONTH!!



@RDJ_TRUCKS



@RDJTRUCKS