



# RDJ Trucks PRO-OFFROAD Bolt-On Style Fender Flares RDJ Trucks PRO-X-TEND Streamline Style Fender Flares

Installation Instructions - Ford F250/F350 SuperDuty - 2008-2010

Part# **10-3016** PRO-OFFROAD Bolt-On Style

Part# **25-3016** PRO-X-TEND Streamline Style

---

## \*\*\*ATTENTION\*\*\*ATTENTION\*\*\*ATTENTION\*\*\* YOU MUST READ THE FOLLOWING POINTS BEFORE PROCEEDING WITH ANY STEP OF INSTALLATION

1. Inspect your fender flares for shipping damage immediately upon receipt. Shipping damage must be reported within 48 hours of receipt.
2. Test fit all flare pieces to your vehicle before beginning any other step to confirm you have received the correct set of fender flares for your application. Ensure that all pieces in the parts list below are present.
3. While professional installation is always recommended, RDJ Trucks fender flares can be installed by handy individuals with the proper tools. However, it is a 2-man job. Attempting to achieve a proper fit on one's own is highly discouraged.
3. Due to the tolerances allowed by the motor companies during the assembly of the vehicles, some adjustments or modifications may be necessary to achieve a proper fit.
4. PAINTING - All inspections and test fittings must be made prior to painting the fender flares. No claim of damage, fitment or other defects/errors may be made after painting has occurred. RDJ Trucks is not liable for any costs incurred from painting and/or associated labor.
5. Most importantly, we know that when it comes to choosing fender flares for your truck, you have a multitude of options. We are extremely grateful that you put your faith in our small company. If you experience any issues or if there is anything we can do to assist you, please don't hesitate to contact us - [info@rdjtrucks.com](mailto:info@rdjtrucks.com)

---

## PARTS LIST



80#-0312LF  
LEFT FRONT  
FLARE



80#-0312RF  
RIGHT FRONT  
FLARE



80#-0312LR  
LEFT REAR  
FLARE



80#0312RR  
RIGHT REAR  
FLARE



R0300  
(354")



PUSH-IN  
CLIP  
10 PCS EA



SELF  
TAPPING  
SCREW  
8PCS



ALLEN BOLT  
38 PCS



NYLON NUT  
38 PCS




WASHER  
38 PCS



TORX BIT  
1 PC


\*\*\*POCKET HARDWARE NOT INCLUDED WITH\*\*\*  
PRO-X-TEND SERIES FLARES

## 1. RUBBER WEATHER SEAL APPLICATION

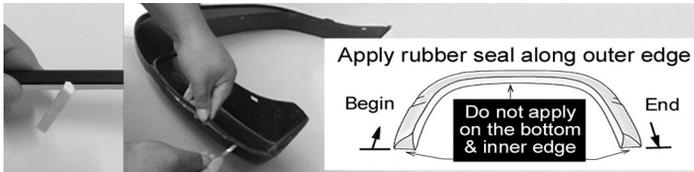

1. Thoroughly clean inside top edge of each flare (where the 3M adhesive will touch) with an alcohol based cleaner.
2. Do not peel the red backing off of the 3M adhesive until instructed. Beginning with the first flare, apply the rubber weather seal in roughly 1 foot sections at a time. From the starting end, leave an extra 1 inch of trim off of the end of the flare so that you can grab and peel the red adhesive backing.
3. With roughly 1 foot of trim applied to the edge, peel the red adhesive backing, pulling it out a few inches at a time. At the same time, press trim firmly in place, ensuring that it is securely adhered to the edge of the flare.
4. Continue the same process in 1 foot sections until the trim is firmly adhered to the entire outer edge of the flare. With a razor knife, cut off the excess trim from each end of the flare.
5. Repeat process for remaining flares.

## 2. POCKET BOLT APPLICATION

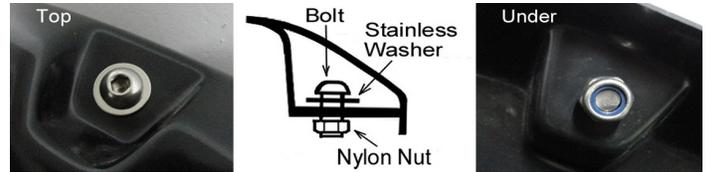

\*SKIP THIS STEP FOR PRO-X-TEND SERIES FLARES


1. Apply washer to allen bolt and insert allen bolt into each pocket hole.  
\*NOTE: Washer should be on the outside of the flare underneath the allen bolt head, NOT on the backside under the nylon nut.
2. Apply nylon nut to allen bolt and tighten carefully. Do not overtighten.
3. Repeat for each pocket.

## 3. FRONT FLARE - INSTALLATION (DRIVER)



1. Remove the 3 existing fasteners from the vehicle at the locations shown above.
2. With a helper, firmly place the left front (LF) flare on the fender in the proper position and re-insert the original fasteners removed in the previous step. Do not tighten completely.
3. Make proper adjustments to ensure that the flare is flush against the vehicle. With a helper holding the flare firmly in place, tighten the fasteners.
4. Repeat the process for the passenger side.

## 4. REAR FLARE - INSTALLATION (DRIVER)

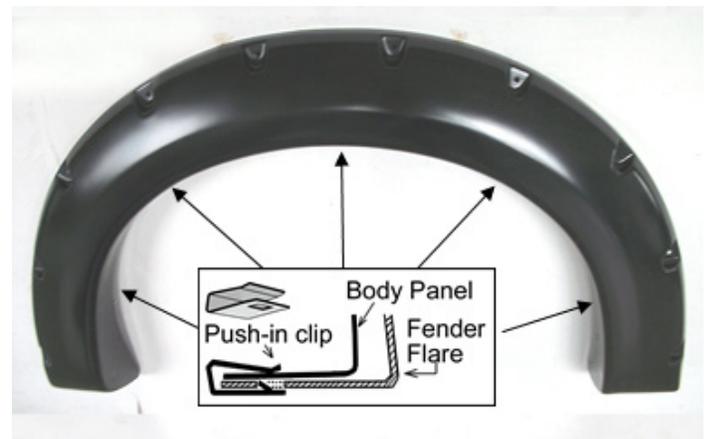

1. With a helper, firmly place the left rear (LR) flare on the fender in the proper position.
2. Apply 5 push-in clips over the fender lip and flare lip in the locations shown above. Make sure that the locking tab is on the underside as shown and locks into the slots in the flare, securing it to the vehicle.
3. Repeat the process for the passenger side.

## 5. FINAL INSPECTION

1. Due to the tolerances allowed by the motor companies during assembly of the vehicle, adjustments may be necessary to work out any gaps that may occur and ensure a proper, flush fit.
2. Supplied self-tapping screws may be inserted in any location that is in need of additional support. With a helper holding the flare flush against the fender of the truck, insert self-tapping screws through the inner lip of the flare and into fender well wall. Repeat as needed.
3. Check rubber weather seal to ensure a proper seat. Make sure that the top edge of the rubber weather seal is not folded under, behind the flare at any point. If necessary, use the seal tool properly seat the rubber weather seal.



***DON'T FORGET***

**ABOUT OUR TRAVEL-PRO  
65-SERIES TONNEAU COVERS**

**TRI-FOLDING HARD-FLIP STYLE  
INSTALL AND REMOVE IN LESS THAN 5 MINUTES!**

***FOLLOW US & WIN!!***

**BE SURE TO FOLLOW US & TAG US IN YOUR PICTURES FOR  
A CHANCE TO WIN A 100% REBATE OF YOUR PURCHASE!  
A NEW WINNER DRAWN EVERY MONTH!!**



**@RDJ\_TRUCKS**



**@RDJTRUCKS**