


## **INSTALLATION SHEET**

## **65-SERIES HARD TRI-FOLD TONNEAU COVER**

The Travel Pro hard tri-fold tonneau cover comes fully assembled and ready to install. Please note any damage or missing components before installing.

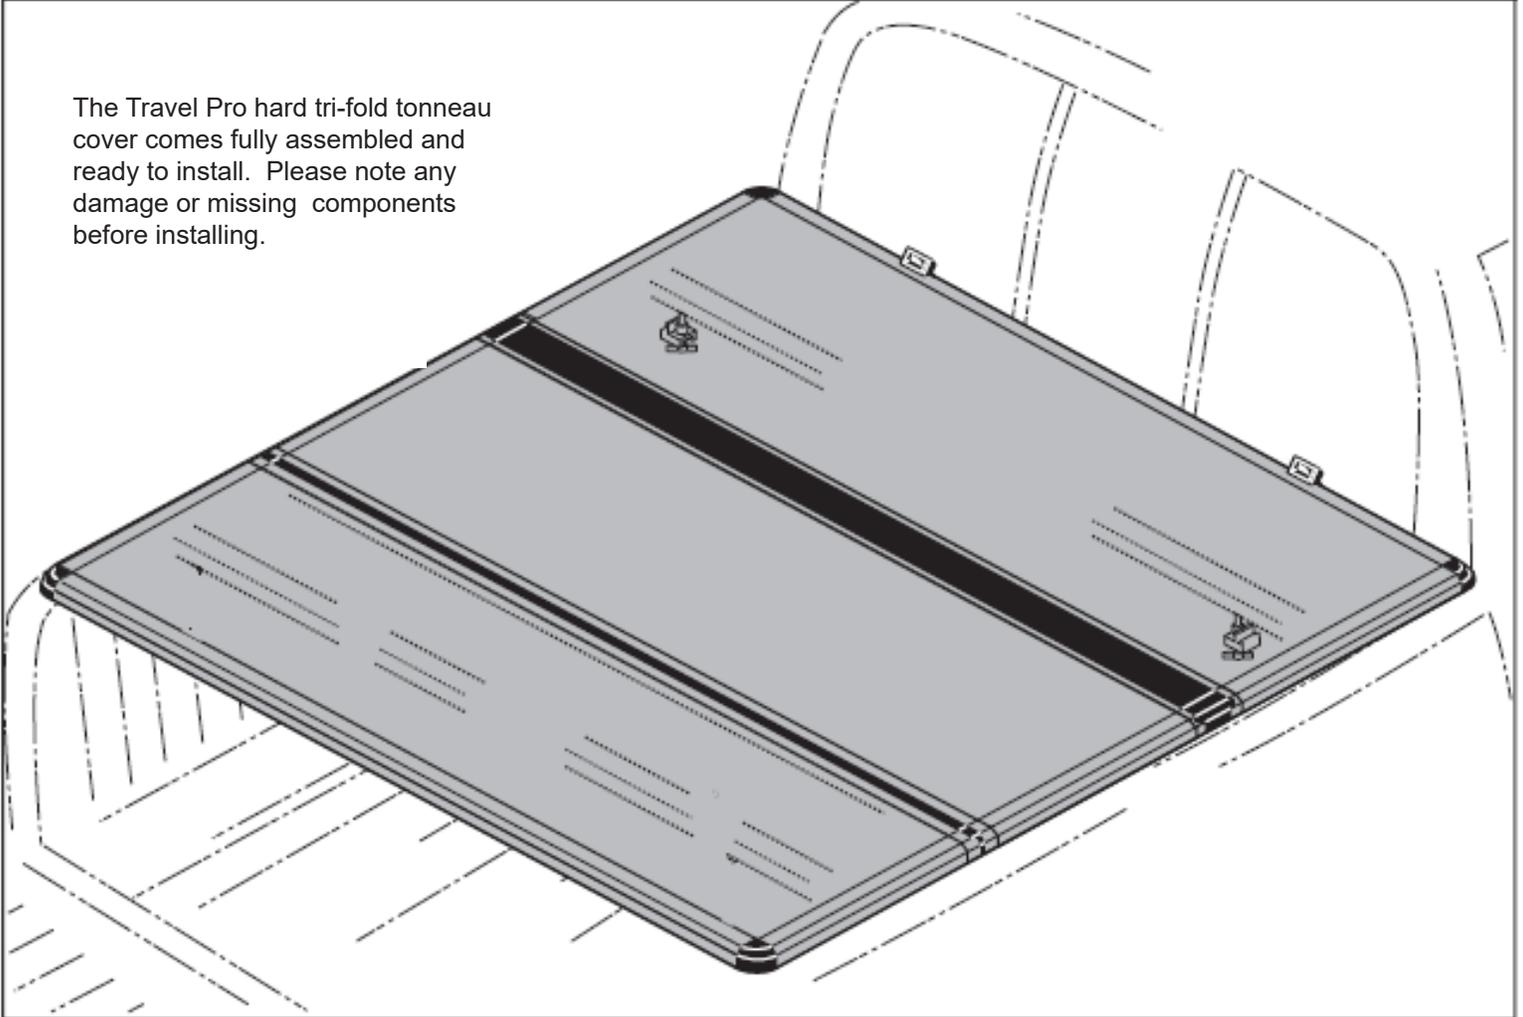


**1**



Wash truck bed.


**2**

Place assembled cover over the cab end of the truck.

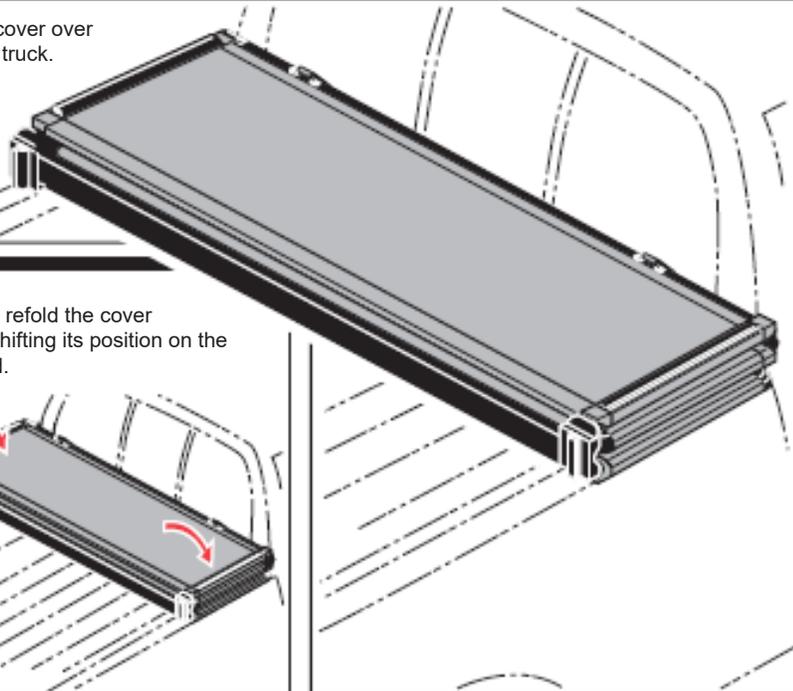







**3**

Unfold the cover fully and adjust the position over the bed for proper cab/tail alignment.

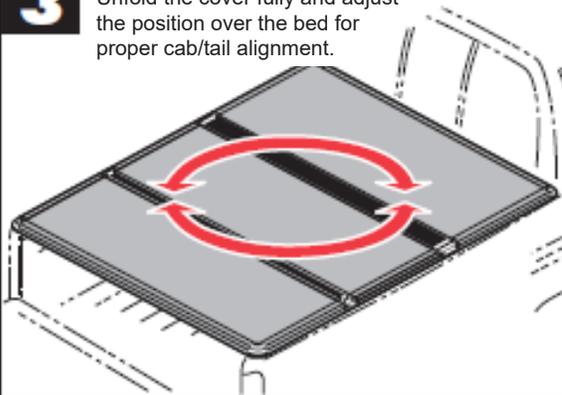

Carefully refold the cover without shifting its position on the truck bed.

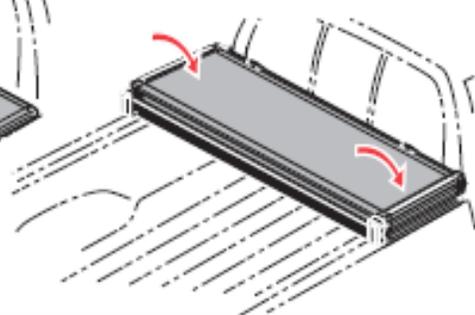

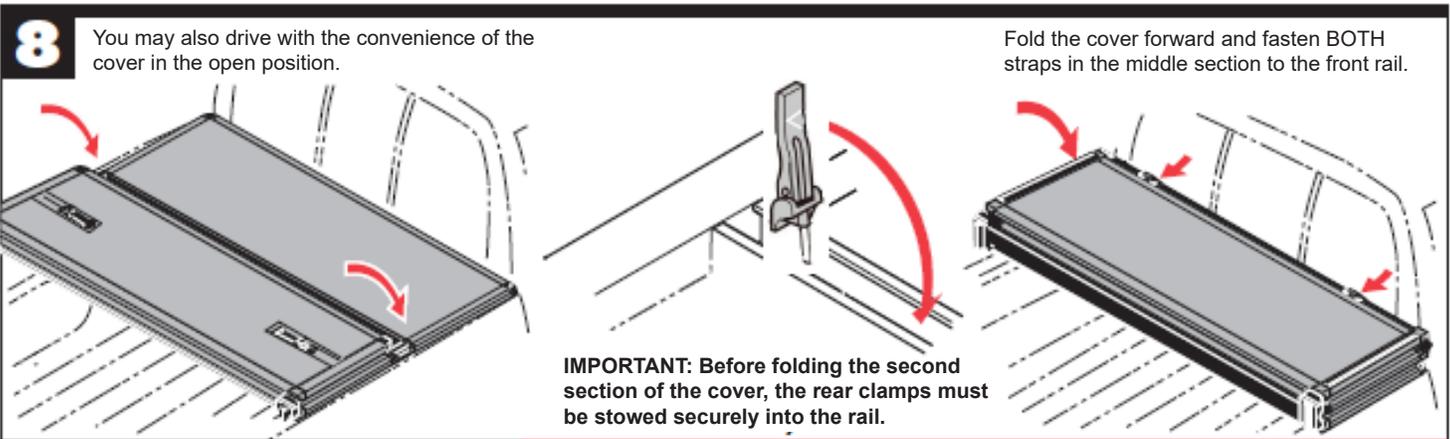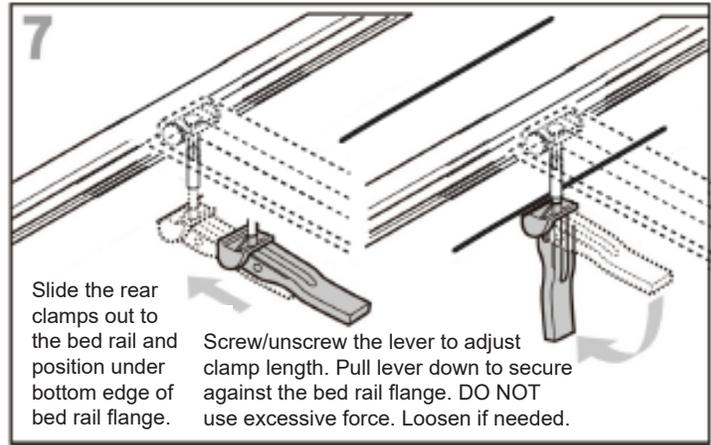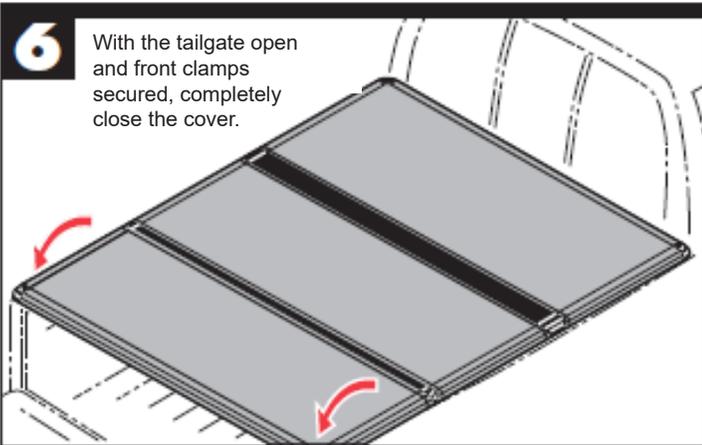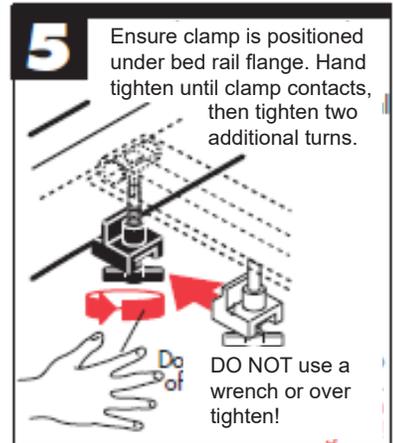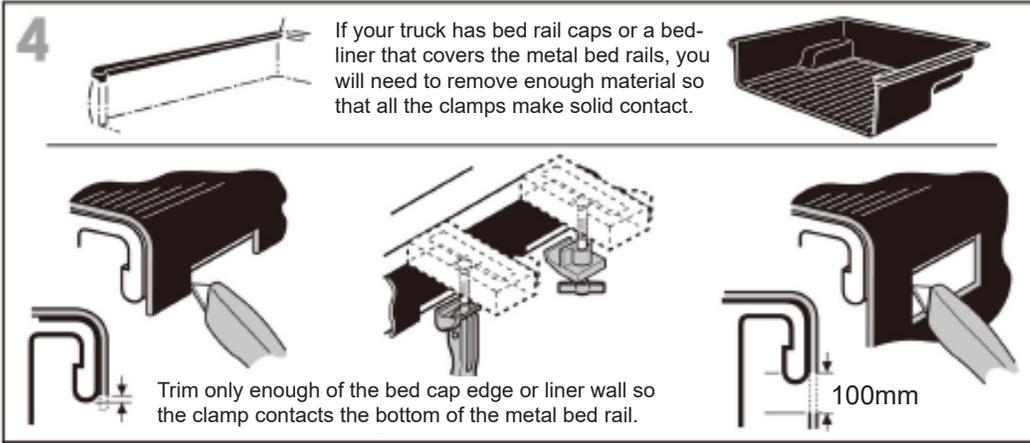

Remove any snow or foreign matter before folding the cover.

**IMPORTANT NOTICE**

While driving, the cover must be completely flat and secure with all four clamps in the closed position or completely folded up (all panels) and secured at the cab. DO NOT DRIVE with the cover in a partially opened position.

